 





Using the Sony Handycam Camcorder


> **Turn on camcorder:** Open the LCD screen of the camcorder > Press Power button

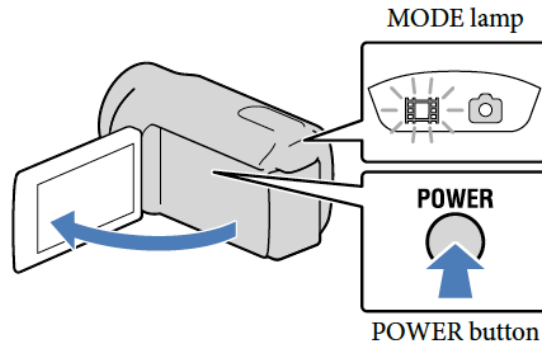
 
> **Shooting Videos:** Press MODE to turn movie lamp > Press START/STOP to start recording > Press START/STOP again to stop recording

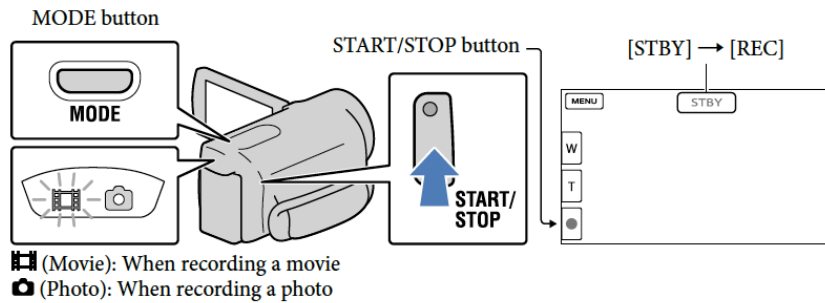
 
> **Review videos:** Press View Images on the LCD screen > Use the arrows to select video > Touch a video that you want to play > Press Stop button to stop playing video

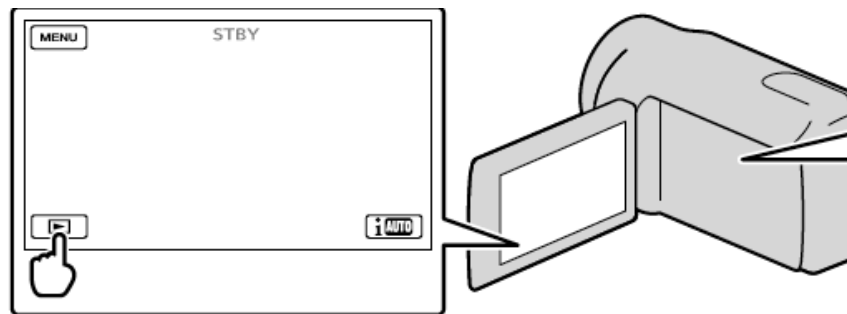

> **Turn Off:** Close the LCD screen (Movie lamp will flash for a few seconds then the camcorder will completely turn off)

Charging the Camcorder

- 1. Turn Off camcorder:** Close the LCD screen
- 2. Attach the battery:** Slide battery pack into the back of the camcorder
- 3. Connect AC Adaptor to camcorder and the other end to the wall outlet:** The CHG (charge) light will turn on when the battery is charging. The CHG (charge) light will turn off when the battery is charged.
- 4. Charged battery:** Disconnect the AC Adaptor

